



# Chromalox®

## Installation Instructions

### SERVICE REFERENCE

|                 |              |
|-----------------|--------------|
| DIVISION 4      | SECTION      |
| SALES REFERENCE | PK496        |
|                 | 0037-75448   |
| DATE            | AUGUST, 2008 |

## LM-2 Solid State Relay Driver

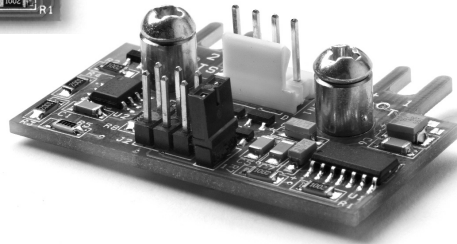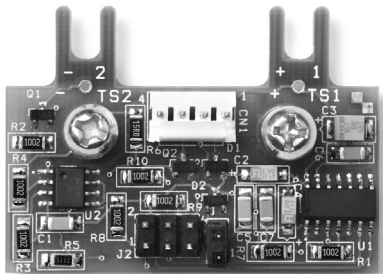

| Model      | PCN    |
|------------|--------|
| 0135-28144 | 341260 |

### GENERAL

The LM-2 (0135-28144) module accepts a 4-20 mA control signal and converts it to a 4.5-32 Vdc proportional control signal. A power supply is not required. The LM-2 is powered by the 4-20 mA loop. The LM-2 Module supports single and three-phase 2-leg power control configurations.

The LM-2 module mounts directly to the input terminals labeled A2(-) and A1(+) of the solid state relay. Screw terminals are provided on the LM-2 module for the 4-20 mA control signal. The solid state relay's load is connected to terminals L1 and T1.

Once the connections are made, the LM-2 module and solid state relay(s) provide proportional zero-fired power control to the load.

### ⚠ WARNING

**ELECTRIC SHOCK HAZARD. Disconnect all power before installing the Solid State Relay Driver. Failure to do so could result in personal injury or equipment damage.**

### SPECIFICATIONS


Input ..... 4 - 20 mA  
 Time Base ..... 3 Cycle Resolution  
 Line Frequency ..... 50/60 Hz Selectable  
 Compliance Voltage Requirement.... 6.4 Vdc (320 ohms @ 20 mA)

Span & Linearity..... < 2%  
 Ambient Temperature ..... 32 - 104°F  
 Dimensions ..... 1.25"W x 1.75"L x .75"D

# WIRING


## Single Phase Power Control Wiring

1. Mount LM-2 Module as shown by loosening A1 and A2 connection screws on SSR. Insert LM-2 "fingers" under connection screws. Tighten screws.
2. Connect 4-20 mA control signal input wiring to terminal connections on LM-2 module.
3. Connect load wiring to L1 and T1 screw terminals.
4. If operating on 50 Hz line power, remove J1 and discard.

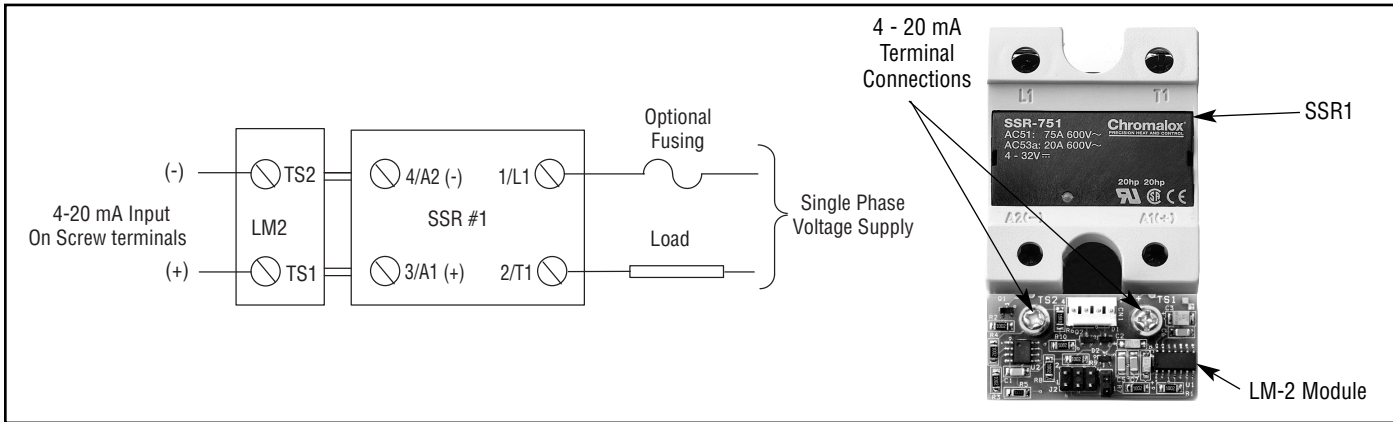

## Three Phase 3-Wire 2-Leg Switching Power Control Wiring

1. Mount LM-2 Module as shown by loosening A1 and A2 connection screws on SSR. Insert LM-2 "fingers" under connection screws. Tighten screws.
2. Install 2-Leg harness (P/N 0023-70178) as Shown.
3. Connect 4 - 20 mA control signal input wiring to terminal connections on LM-2 module.
4. Connect load wiring to L1 and T1 screw terminals.
5. If operating on 50 HZ line power, remove J1 and discard.

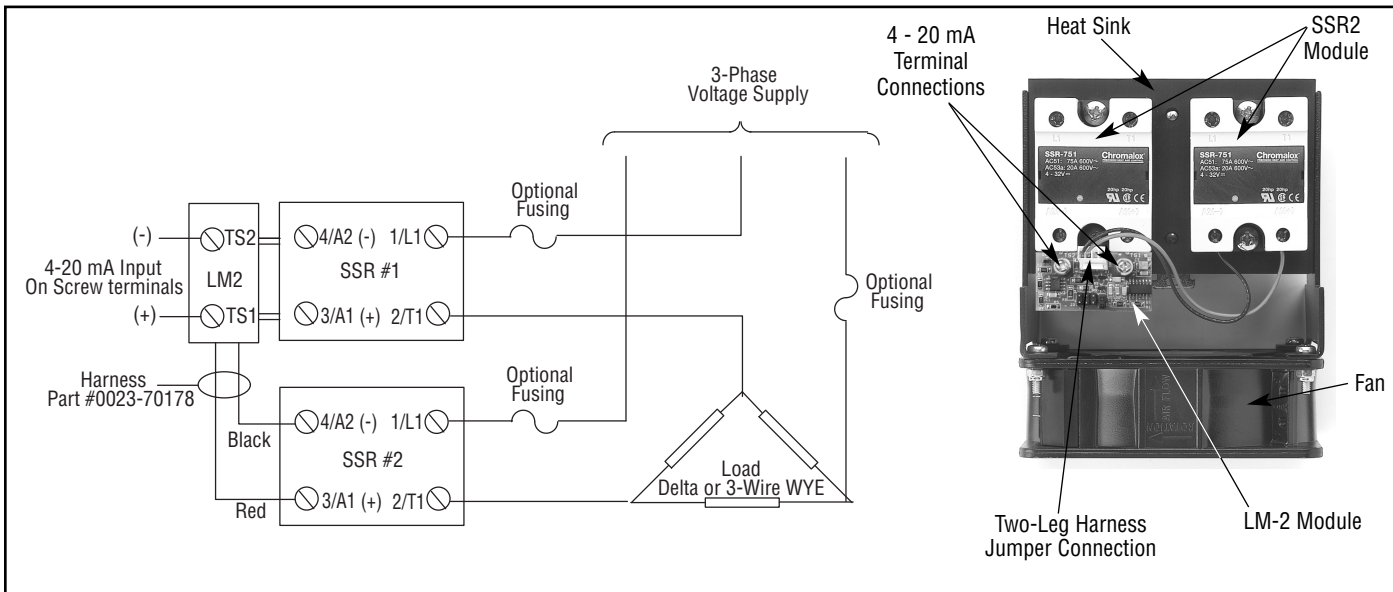

## WARRANTY AND LIMITATION OF REMEDY AND LIABILITY

Chromalox warrants only that the Products and parts manufactured by Chromalox, when shipped, and the work performed by Chromalox when performed, will meet all applicable specification and other specific product and work requirements (including those of performance), if any, and will be free from defects in material and workmanship under normal conditions of use. All claims for defective or nonconforming (both hereinafter called defective) Products, parts or work under this warranty must be made in writing immediately upon discovery, and in any event, within one (1) year from delivery, provided, however all claims for defective Products and parts must be made in writing no later than eighteen (18) months after shipment by Chromalox. Defective and nonconforming items must be held for Chromalox's inspections and returned to the original f.o.b. point upon request. THE FOREGOING IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES WHATSOEVER, EXPRESS, IMPLIED AND STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Notwithstanding the provisions of this WARRANTY AND LIMITATION Clause, it is specifically understood that Products and parts not manufactured and work not performed by Chromalox are warranted only to the extent and in the manner that the same are warranted to Chromalox by Chromalox's vendors, and then only to the extent that Chromalox is reasonably able to enforce such warranty, it being understood Chromalox shall have no obligation to initiate litigation unless Buyer undertakes to pay all cost and expenses therefor, including but not limited

to attorney's fees, and indemnifies Chromalox against any liability to Chromalox's vendors arising out of such litigation.

Upon Buyer's submission of a claim as provided above and its substantiation, Chromalox shall at its option either (i) repair or replace its Products, parts or work at the original f.o.b. point of delivery or (ii) refund an equitable portion of the purchase price.

THE FOREGOING IS CHROMALOX'S ONLY OBLIGATION AND BUYER'S EXCLUSIVE REMEDY FOR BREACH OF WARRANTY, AND IS BUYER'S EXCLUSIVE REMEDY AGAINST CHROMALOX FOR ALL CLAIMS ARISING HEREUNDER OR RELATING HERETO WHETHER SUCH CLAIMS ARE BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE AND STRICT LIABILITY) OR OTHER THEORIES, BUYER'S FAILURE TO SUBMIT A CLAIM AS PROVIDED ABOVE SHALL SPECIFICALLY WAIVE ALL CLAIMS FOR DAMAGES OR OTHER RELIEF, INCLUDING BUT NOT LIMITED TO CLAIMS BASED ON LATENT DEFECTS. IN NO EVENT SHALL BUYER BE ENTITLED TO INCIDENTAL OR CONSEQUENTIAL DAMAGES AND BUYER SHALL HOLD CHROMALOX HARMLESS THEREFROM. ANY ACTION BY BUYER ARISING HEREUNDER OR RELATING HERETO, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE AND STRICT LIABILITY) OR OTHER THEORIES, MUST BE COMMENCED WITHIN ONE (1) YEAR AFTER THE DATE OF SHIPMENT OR IT SHALL BE BARRED.

W2008M

**Chromalox**<sup>®</sup>  
PRECISION HEAT AND CONTROL

1347 HEIL QUAKER BLVD., LAVERGNE, TN 37086  
Phone: (615) 793-3900      www.chromalox.com