

INSTALLATION & OPERATION INSTRUCTIONS

TL, KTL, and BLC Over-The-Side Immersion Heaters



TABLE OF CONTENTS

GENERAL	3
Safety Guidelines	3
Specifications	4
 INSTALLATION	 6
Manhole Option	8
Wiring	9
 OPERATION & MAINTENANCE	 12
Operation	12
Maintenance	13

⚠ WARNING

Do not operate, or allow others to operate, service or repair this equipment unless you (they) fully understand all applicable sections of this manual and are qualified to operate/maintain the equipment.

IMPORTANT: It is the responsibility of the purchaser of the heater to make the ultimate choice of sheath material based upon his knowledge of the chemical composition of the corrosive solution, character of the materials entering the solution, and controls which he maintains on the process. CHROMALOX cannot warrant any electric immersion heater against failure by sheath corrosion if such failure is the result of operating conditions beyond our control.

Sheath corrosion can result in a ground fault which, depending upon the solution being heated, can cause an explosion or fire.

GENERAL

SAFETY GUIDELINES

The safety and performance of this heater is dependent on proper handling, installation, control and maintenance. As Chromalox can not anticipate all conditions under which this information and heater, or this heater in combination with other manufacturer's products may be used, it is advised that you conduct your own tests to determine the safety and suitability of this heater in combination with other products in your application. Where the consequences of overheating or failure could result in personal injury or property damage, back-up controls and safety devices are essential.



Chromalox Type TLC, TLO, TLS, TLI, KTLC, KTLO, KTLS, KTLI, BLCK, & BLCS series industrial Over-The-Side immersion heaters are designed for a wide variety of heating applications.

Heater Construction Characteristics

- a. High quality resistance wire held in place by compacted Magnesium Oxide Refractory or compacted proprietary cement enclosed in a wide variety of sheath materials.
- b. Low to high watt densities.
- c. Standard selection of sheath materials include copper, steel, INCOLOY® alloy and stainless steel. This broad selection of sheath materials will operate successfully in many corrosive solutions.
- d. Riser type construction puts the heat at the bottom inducing natural "stirring action" and evenly distributed temperatures.
- e. Units are available with E1 General Purpose, E4 Moisture Resistant, and E2 Explosion/Moisture Resistant enclosures.

SPECIFICATIONS

TL SERIES

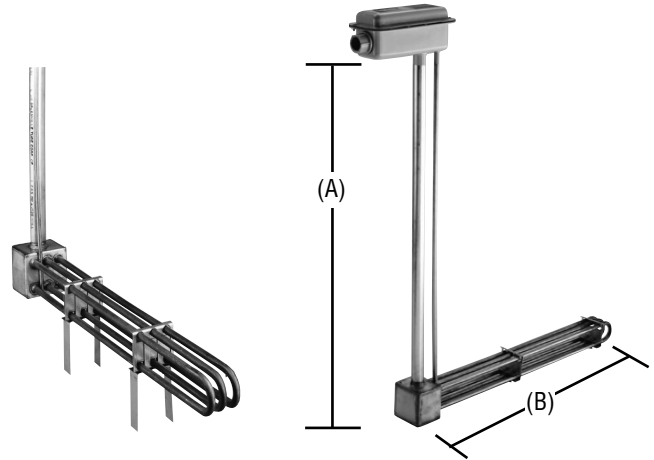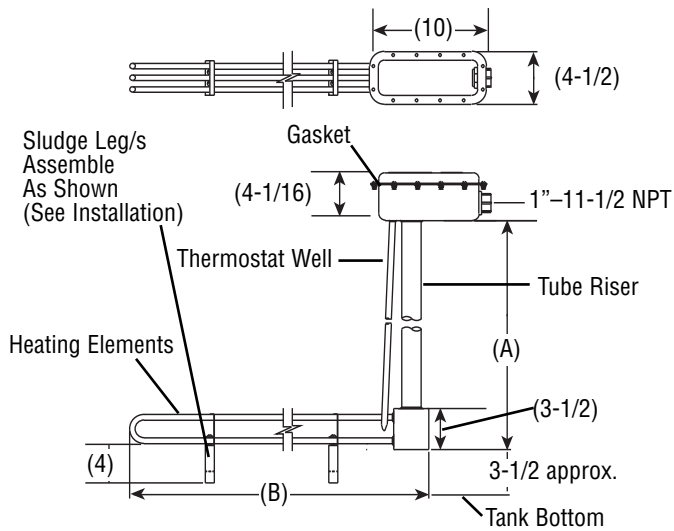


Note: Thermostat shipped separately in kit. See page with renewal parts for ordering information.

Specifications –

Model	No. Elements	Phase	Volts	kW	Model	No. Elements	Phase	Volts	kW	Sheath Material	Dimensions (In.)	
											(A) Riser Height	(B) Min. Tank Opening Clearance
TLC-210	2	1	240-480	10	TLC-315	3	1 or 3Δ	240-480	15	Copper	48	45
TLC-212	2	1	240-480	12	TLC-318	3	1 or 3Δ	240-480	18	Copper	48	52-1/2
TLC-220	2	1	120-240-480	2	TLC-330	3	1 or 3Δ 1 or 3Y	120-240-480	3	Copper	36	12-1/4
TLC-240	2	1	120-240-480	4	TLC-360	3	1 or 3Δ	120-240-480	6	Copper	36	22-1/4
TLC-260	2	1	120-240-480	6	TLC-390	3	1 or 3Δ	120-240-480	9	Copper	36	29-1/2
TLC-280	2	1	240-480	8	TLC-312	3	1 or 3Δ	240-480	12	Cooper	36, 48	37-3/8
TLI-210	2	1	240-480	10	TLI-315	3	1 or 3Δ	240-480	15	Incoloy	48	45
TLI-212	2	1	240-480	12	TLI-318	3	1 or 3Δ	240-480	18	Incoloy	48	52-1/2
TLI-220	2	1	120-240-480	2	TLI-330	3	1 or 3Δ 1 or 3Y	120-240-480	3	Incoloy	36	12-1/4
TLI-240	2	1	120-240-480	4	TLI-360	3	1 or 3Δ	120-240-480	6	Incoloy	36	22-1/4
TLI-260	2	1	120-240-480	6	TLI-390	3	1 or 3Δ	120-240-480	9	Incoloy	36	29-1/2
TLI-280	2	1	240-480	8	TLI-312	3	1 or 3Δ	240-480	12	Incoloy	36, 48	37-3/8
TLO-220	2	1	120-240-480	2	TLO-330	3	1 or 3Δ	120-240-480	3	Steel	36	22-1/4
TLO-230	2	1	120-240-480	3	TLO-345	3	1 or 3Δ	120-240-480	4.5	Steel	36	29-1/2
TLO-240	2	1	120-240-480	4	TLO-360	3	1 or 3Δ	120-240-480	6	Steel	36, 48	37-3/8
TLO-250	2	1	120-240-480	5	TLO-375	3	1 or 3Δ	120-240-480	7.5	Steel	48	45
TLO-260	2	1	120-240-480	6	TLO-390	3	1 or 3Δ	120-240-480	9	Steel	48	52-1/2
TLO-270	2	1	240-480	7	TLO-310	3	1 or 3Δ	240-480	10	Steel	48	56-1/2
TLS-210	2	1	240-480	10	TLS-315	3	1 or 3Δ	240-480	15	Stainless Steel	48	45
TLS-212	2	1	240-480	12	TLS-318	3	1 or 3Δ	240-480	18	Stainless Steel	48	52-1/2
TLS-220	2	1	120-240-480	2	TLS-330	3	1 or 3Δ 1 or 3Y	120-240-480	3	Stainless Steel	36	12-1/4
TLS-240	2	1	120-240-480	4	TLS-360	3	1 or 3Δ	120-240-480	6	Stainless Steel	36	22-1/4
TLS-260	2	1	120-240-480	6	TLS-390	3	1 or 3Δ	120-240-480	9	Stainless Steel	36	29-1/2
TLS-280	2	1	240-480	8	TLS-312	3	1 or 3Δ	240-480	12	Stainless Steel	36, 48	37-3/8


KTL SERIES

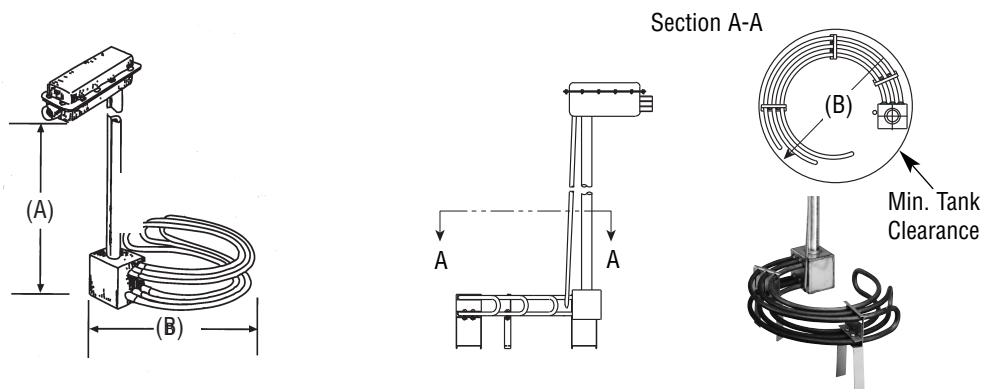

Specifications –

Model	No. Elements	Phase	Volts	kW	Model	No. Elements	Phase	Volts	kW	Sheath Material	Dimensions (In.)	
											(A) Standard Riser Height	(B) Min Tank Opening Clearance
KTLC-210	2	1	240-480	10	KTLC-315	3	1 or 3Δ	240-480	15	Copper	48	21-1/4
KTLC-212	2	1	240-480	12	KTLC-318	3	1 or 3Δ	240-480	18	Copper	48	23-1/2
KTLC-240	2	1	120-240-480	4	KTLC-360	3	1 or 3Δ	120-240-480	6	Copper	36	13-3/4
KTLC-260	2	1	120-240-480	6	KTLC-390	3	1 or 3Δ	120-240-480	9	Copper	36	16-1/8
KTLC-280	2	1	240-480	8	KTLC-312	3	1 or 3Δ	240-480	12	Cooper	36, 48	18-5/8
KTLI-210	2	1	240-480	10	KTLI-315	3	1 or 3Δ	240-480	15	Incoloy	48	21-1/4
KTLI-212	2	1	240-480	12	KTLI-318	3	1 or 3Δ	240-480	18	Incoloy	48	23-1/2
KTLI-240	2	1	120-240-480	4	KTLI-360	3	1 or 3Δ	120-240-480	6	Incoloy	36	13-3/4
KTLI-260	2	1	120-240-480	6	KTLI-390	3	1 or 3Δ	120-240-480	9	Incoloy	36	16-1/8
KTLI-280	2	1	240-480	8	KTLI-312	3	1 or 3Δ	240-480	12	Incoloy	36, 48	18-5/8
KTLO-220	2	1	120-240-480	2	KTLO-330	3	1 or 3Δ	120-240-480	3	Steel	36	13-3/4
KTLO-230	2	1	120-240-480	3	KTLO-345	3	1 or 3Δ	120-240-480	4.5	Steel	36	16-1/8
KTLO-240	2	1	120-240-480	4	KTLO-360	3	1 or 3Δ	120-240-480	6	Steel	36, 48	18-5/8
KTLO-250	2	1	120-240-480	5	KTLO-375	3	1 or 3Δ	120-240-480	7.5	Steel	48	21-1/4
KTLO-260	2	1	120-240-480	6	KTLO-390	3	1 or 3Δ	120-240-480	9	Steel	48	23-1/2
KTLO-270	2	1	240-480	7	KTLO-310	3	1 or 3Δ	240-480	10	Steel	48	24-7/8
KTLS-210	2	1	240-480	10	KTLS-315	3	1 or 3Δ	240-480	15	Stainless Steel	48	21-1/4
KTLS-212	2	1	240-480	12	KTLS-318	3	1 or 3Δ	240-480	18	Stainless Steel	48	23-1/2
KTLS-240	2	1	120-240-480	4	KTLS-360	3	1 or 3Δ	120-240-480	6	Stainless Steel	36	13-3/4
KTLS-260	2	1	120-240-480	6	KTLS-390	3	1 or 3Δ	120-240-480	9	Stainless Steel	36	16-1/8
KTLS-280	2	1	240-480	8	KTLS-312	3	1 or 3Δ	240-480	12	Stainless Steel	36, 48	18-5/8

BLC SERIES

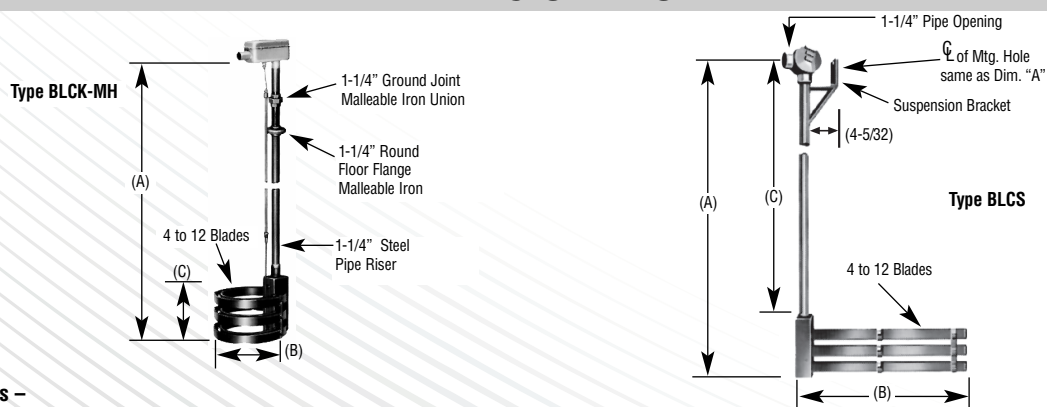

Specifications –

Model	No. Blades	Phase	Kilowatts			Voltage	Dimensions (In.)		
			Regular Oil 18 W/in ²	Fuel Oil 12 W/in ²	40 W/in ²		(A) Riser Height	(B) Min Tank Opening Clearance	(C)
BLCK-MH618	6	1 or 3 Δ	12	7.5	—	240 or 480	144	16-1/2	8-7/8
BLCK-MH824	8	1 or 3 Δ	16	10	—	240 or 480	144	16-1/2	12
BLCK-MH103	10	1 or 3 Δ	20	12.5	—	240 or 480	144	16-1/2	15-1/8
BLCK-MH236	12	1 or 3 Δ	24	15	—	240 or 480	144	16-1/2	18-1/4
BLCS-618	6	1 or 3 Δ	12	7.5	—	240 or 480	144	34	8-7/8
BLCS-824	8	1 or 3 Δ	16	10	—	240 or 480	144	34	12
BLCS-1030	10	1 or 3 Δ	20	12.5	—	240 or 480	144	34	15-1/8
BLCS-1236	12	1 or 3 Δ	24	15	—	240 or 480	144	34	18-1/4

INSTALLATION

1. Before installing, check your Over-The-Side heater for any damage that may have occurred during shipment. Also, check to ensure that the line voltage is the same as that stamped on the nameplate.
2. Do not bend heating elements. If bending is necessary, consult factory
3. **IMPORTANT:** Mount the heater in the tank so that the liquid level will always be above the effective heated portion of the heater. If the heater is not properly submerged, it will overheat and damage the heating elements and create a possible fire hazard due to excessive sheath temperatures. See “Warning” under “Installation” section. (see Figure 1).
4. Heater must be supported from tank bottom. Heater must not be operated in sludge. Sludge legs can be provided. Assemble as shown in Figure 1.
5. Where work will pass over or near equipment, additional protection, such as a metal guard, may be needed.
6. In the electroplating operation the heaters are not, under any circumstance, to be placed between the electrodes and the work.
7. When melting solids by direct immersion, a surface vent should be provided to allow gases to escape. Operate the heater on half voltage until melted material completely covers the heater area.
8. A drip loop is recommended to minimize passage of moisture along wiring into terminal enclosure and connections.
9. To prevent moisture accumulation in cryogenic applications or when heater is exposed to freezing temperatures:
 - a. Slope conduit away from enclosure (drip loop).
 - b. Seal all conduit openings to moisture/explosion resistant terminal enclosure.
 - c. Insulate terminal enclosure.
10. Heaters with Manhole Option (floor flange) refer to Figure 2.

⚠ WARNING

FIRE HAZARD. An integral thermostat, if provided, is designed for temperature control service only. Because the thermostat does not fail safe, it should not be used for temperature limiting duty. Wiring to this device is the responsibility of the user.

The system designer is responsible for the safety of this equipment and should install adequate back-up controls and safety devices with their electric heating equipment. Where the consequences of failure could result in personal injury or property damage, back-up controls are essential.

FIRE/EXPLOSION HAZARD. Use only Explosion Resistant Enclosures (E2, or ER) in hazardous atmospheres where flammable vapors, gases, liquids or other combustible atmospheres are present as defined in the National Electrical Code (NFPA 70). Failure to comply could result in personal injury or property damage.

ELECTRIC SHOCK HAZARD. Disconnect all power before installing or servicing heater. Failure to do so could result in personal injury or property damage. Heater must be installed by a qualified person in accordance with the National Electrical Code, NFPA 70.

FIRE HAZARD. Since heaters are capable of developing high temperatures, extreme care should be taken to avoid contact between heater and combustible materials. Keep combustible materials far enough away to be free of the effects of high temperatures

⚠ CAUTION

FREEZE HAZARD. Some Over-The-Side heaters are equipped with a thermowell for process control or over-temperature control. Do not allow moisture to accumulate in thermowell. Freezing temperatures can cause damage that may result in the heated medium leaking into terminal enclosure.

The diagram illustrates the correct installation of a submersible heater in a liquid storage tank. A vertical rod with a heater element at the bottom is shown. A 'Drip Loop' is formed in the wiring above the tank to prevent moisture from entering the terminal connections. A dashed line indicates the 'Expected Low Liquid Level', which must be at least 6 to 8 inches above the heater element. A shaded area at the bottom represents the 'Expected maximum sediment level below heater'. 'Sludge Legs' are shown as vertical lines of sediment extending upwards from the bottom towards the heater element. Labels include: 'Suitable Wiring', 'Drip Loop recommended to minimize passage of moisture along wiring into terminal wiring connections.', 'Expected Low Liquid Level', 'Always maintain a minimum of 6 to 8" of liquid above the heated portion of the element to prevent exposure of the effective heated length.', 'Expected maximum sediment level below heater', '6 to 8" Minimum', and 'Sludge Legs'.

NOTE: Locate the heater as low as possible for maximum heated liquid storage capacity. Heat does not move downward.

FIRE HFIRE OR SHOCK HAZARD. Moisture accumulation in the element refractory material, element over-temperature, or corrosion can cause ground fault to the element sheath, generating arcing and molten metal. Install Ground Fault Circuit Interrupter (GFCI) to prevent personal injury or Equipment Ground Fault Protection to prevent property damage.

NOTE: If heating in closed vessels, controls and backup controls must be used to prevent buildup of temperature and/or pressure. Maximum pressure rating is 50 PSI.


FREEZE HAZARD. Some Over-The-Side heaters are equipped with a thermowell for process control or over-temperature control. Do not allow moisture to accumulate in thermowell. Freezing temperatures can cause damage that may result in the heated medium leaking into terminal enclosure.

Fittings into electrical enclosure must be properly sealed to prevent contamination of electrical contacts from vapors.

MANHOLE OPTION

1. Unscrew enclosure cover and remove thermostat.
2. Disconnect power wires from the terminal block (if supplied).
3. Unscrew the union (B) and lift the ER enclosure/EYS seal assembly (A) off the riser.
4. Unscrew the bottom half of the union (B), one pipe flange (C), one gasket, and lift then off the riser.
5. Drill a 1-3/4" hole in the manhole cover for the riser.
6. Drill and tap a 1/2" NPT hole for the thermowell cord grip as close to the pipe flange O.D. as possible without interference.
7. Screw the cord grip and fitting into the manhole cover using pipe sealant.
8. Slide the manhole cover over the riser, install the gasket and pipe flange (C), then screw the bottom half of the union (B) on the riser using pipe sealant.
9. Install the heater into the tank and adjust the height (if required) using the pipe flanges.
10. Remove the heater from the tank and install the ER enclosure/EYS seal assembly (A) on the riser union (B). Install the thermowell and thermostat.
11. Reinstall the heater in the tank, connect the power wires.
12. Seal EYS per instruction sheet #500395-1 (supplied with EYS seal).
13. Replace enclosure cover.

FIGURE 2 Manhole Installation

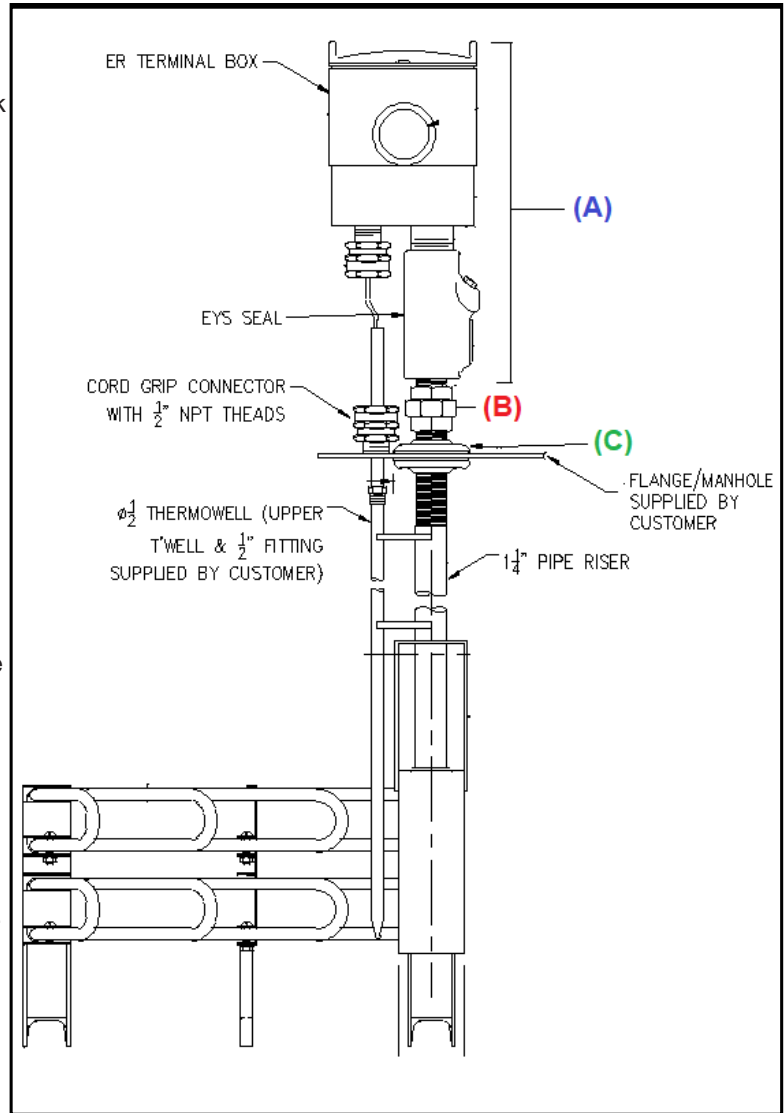

NOTE: There are slight differences in housing types and number of sensors. This may cause a reduction or a repeat of certain steps.

WIRING

1. Electric wiring to heater must be installed in accordance with the National Electrical Code and with local codes by a qualified person.
2. When element wattages are not equal, heaters must not be connected in series.
3. Electrical wiring to heater should be contained in rigid conduit or in sealed flexible conduit to keep corrosive vapors and liquids out of the terminal enclosure. If high humidity is encountered, the conduit should slope away from the heater.
4. If flexible cord is employed, a watertight connector should be used for entry of the cord into the terminal enclosure. Outdoor applications require liquid-tight conduit and connectors.
5. Bring the power line wires through the opening in the terminal enclosure.
6. Heaters are pre-wired and tagged for easy installation of electrical wiring to the heater. Tagging of the individual circuits of Chromalox Industrial Over-The-Side Immersion heaters is shown in the following tabulations. Refers to Type TLC, TLO, TLS, TLI, KTLC, KTLO, KTLS, KTLI, BLCK, and BLCS Series heaters.
7. Make sure heater, is grounded by attaching ground conductor, traceable back to service entrance, to the ground terminal located inside the terminal enclosure. If heater is used in an electroplating tank, the heater should be grounded externally to the tank wall to minimize stray plating currents in heater sheath that may cause sheath corrosion.
8. Check for loose terminal connections and tighten if necessary. Made to order items are pre-wired and tagged at the factory. Wiring of made to order items may differ from those shown in the tabulations.
Carefully check voltage and phase on the heater nameplate and select either the appropriate wiring shown above or check for the appropriate wiring diagram in the heater terminal enclosure.
For reference purposes, some typical wiring diagrams are shown in the following figures.

WARNING

ELECTRIC SHOCK HAZARD. Any installation involving electric heaters must be performed by a qualified person and must be effectively grounded in accordance with the National Electrical Code to eliminate shock hazard.

CAUTION

Use copper conductors only.

WIRING DIAGRAMS – TL SERIES

Model	120V 1Ø Fig.	120V 3ØΔ Fig.	240V 1Ø Fig.	240V 3ØΔ Fig.	480V 1Ø Fig.	480V 3ØΔ Fig.	480V 3ØY Fig.	Model	120V 1Ø Fig.	120V 3ØΔ Fig.	240V 1Ø Fig.	240V 3ØΔ Fig.	480V 1Ø Fig.	480V 3ØΔ Fig.	480V 3ØY Fig.
TLC, TLI and TLS 210	—	—	1	—	1	—	—	TLO 310	—	—	3	4	3	4	—
TLC, TLI and TLS 212	—	—	1	—	1	—	—	TLC, TLI and TLS 312	—	—	3	4	3	4	—
TLC, TLI, TLO and TLS 220	1	—	1	—	2	—	—	TLC, TLI and TLS 315	—	—	3	4	3	4	—
TLO 230	1	—	1	—	1	—	—	TLC, TLI and TLS 318	—	—	3	4	3	4	—
TLC, TLI, TLO and TLS 240	1	—	1	—	1	—	—	TLC, TLI, TLO and TLS 330	3	4	3	4	5	4	6
TLO 250	1	—	1	—	1	—	—	TLO 345	3	4	3	4	3	4	—
TLC, TLI, TLO and TLS 260	1	—	1	—	1	—	—	TLC, TLI, TLO and TLS 360	3	4	3	4	3	4	—
TLO 270	—	—	1	—	1	—	—	TLO 375	3	4	3	4	3	4	—
TLC, TLI and TLS 280	—	—	1	—	1	—	—	TLC, TLI, TLO and TLS 390	3	4	3	4	3	4	—

Note: Use wire size and type specified by NEC.
480V heaters require 600V wire per NEC.
480V heaters require a contactor.
Contactor and wiring supplied by customer.

WIRING DIAGRAMS – KTL SERIES


Model	120V 1Ø Fig.	120V 3ØΔ Fig.	240V 1Ø Fig.	240V 3ØΔ Fig.	480V 1Ø Fig.	480V 3ØΔ Fig.	480V 3ØY Fig.	Model	120V 1Ø Fig.	120V 3ØΔ Fig.	240V 1Ø Fig.	240V 3ØΔ Fig.	480V 1Ø Fig.	480V 3ØΔ Fig.	480V 3ØY Fig.
KTLC, KTLI and KTLS 210	—	—	1	—	1	—	—	KTLO 310	—	—	3	4	3	4	—
KTLC, KTLI and KTLS 212	—	—	1	—	1	—	—	KTLC, KTLI and KTLS 312	—	—	3	4	3	4	—
KTLC, KTLI, KTLO and KTLS 220	1	—	1	—	2	—	—	KTLC, KTLI and KTLS 315	—	—	3	4	3	4	—
KTLO 230	1	—	1	—	1	—	—	KTLC, KTLI and KTLS 318	—	—	3	4	3	4	—
KTLC, KTLI, KTLO and KTLS 240	1	—	1	—	1	—	—	KTLC, KTLI, KTLO and KTLS 330	3	4	3	4	5	4	6
KTLO 250	1	—	1	—	1	—	—	KTLO 345	3	4	3	4	3	4	—
KTLC, KTLI, KTLO and KTLS 260	1	—	1	—	1	—	—	KTLC, KTLI, KTLO and KTLS 360	3	4	3	4	3	4	—
KTLO 270	—	—	1	—	1	—	—	KTLO 375	3	4	3	4	3	4	—
KTLC, KTLI and KTLS 280	—	—	1	—	1	—	—	KTLC, KTLI, KTLO and KTLS 390	3	4	3	4	3	4	—

Note: Use wire size and type specified by NEC.
480V heaters require 600V wire per NEC.
480V heaters require a contactor.
Contactor and wiring supplied by customer.


WIRING DIAGRAMS – BLC SERIES

Model	120V 1Ø Fig.	120V 3ØΔ Fig.	240V 1Ø Fig.	240V 3ØΔ Fig.	480V 1Ø Fig.	480V 3ØΔ Fig.	480V 3ØY Fig.	Model	120V 1Ø Fig.	120V 3ØΔ Fig.	240V 1Ø Fig.	240V 3ØΔ Fig.	480V 1Ø Fig.	480V 3ØΔ Fig.	480V 3ØY Fig.
BLCK	—	—	1	4	1	4	—	BLCS	—	—	7	8	7	8	—


Note: Use wire size and type specified by NEC.
480V heaters require 600V wire per NEC.
480V heaters require a contactor.
Contactor and wiring supplied by customer.

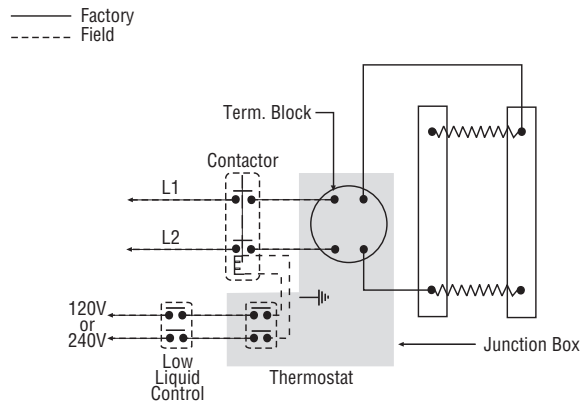


WIRING DIAGRAM 1

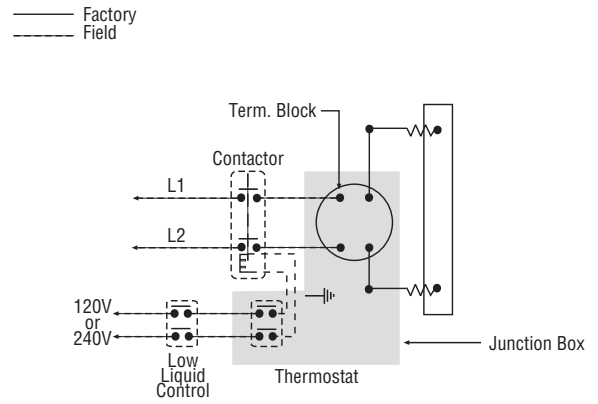


WIRING DIAGRAM 2

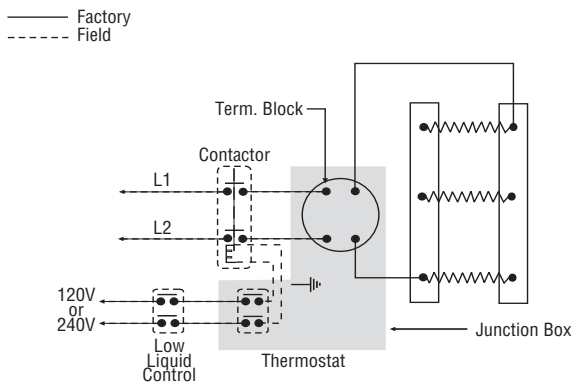


WIRING DIAGRAM 3

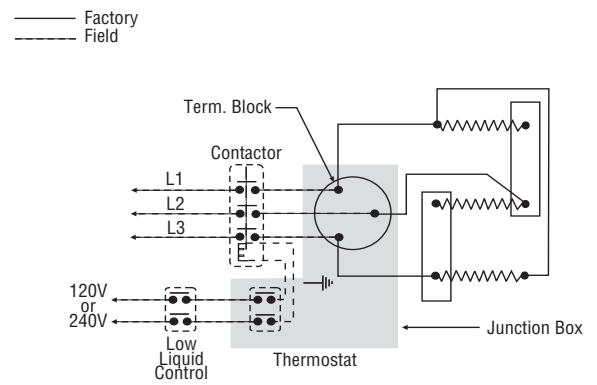


WIRING DIAGRAM 4

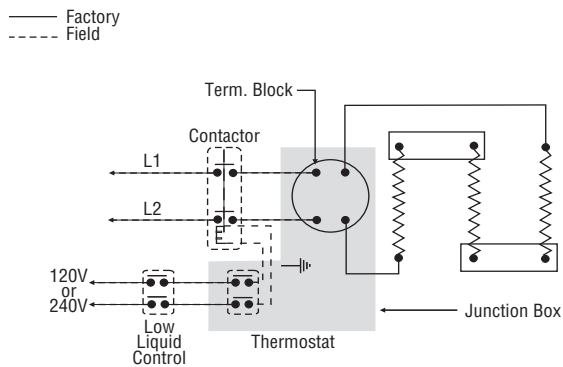


WIRING DIAGRAM 5

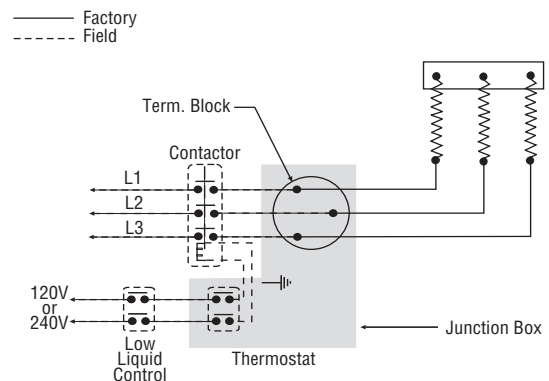

WIRING DIAGRAM 6

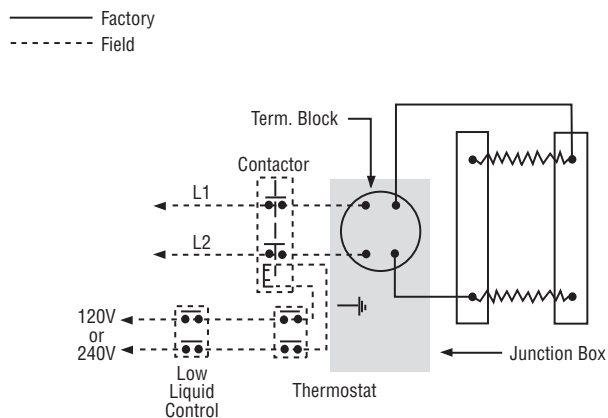

WIRING DIAGRAM 7

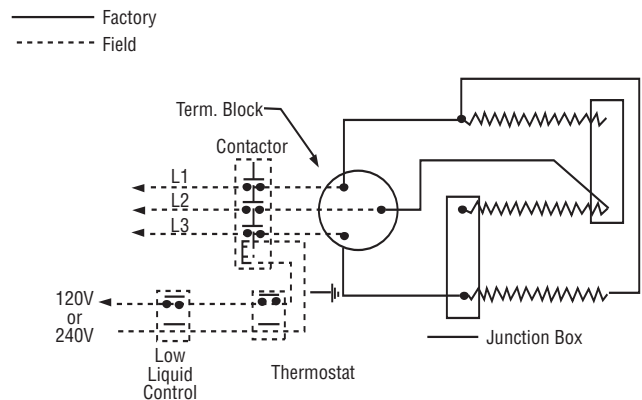

WIRING DIAGRAM 8

⚠ WARNING

Do not operate, or allow others to operate, service or repair this equipment unless you (they) fully understand all applicable sections of this manual and are qualified to operate/maintain the equipment.

IMPORTANT: It is the responsibility of the purchaser of the heater to make the ultimate choice of sheath material based upon his knowledge of the chemical composition of the corrosive solution, character of the materials entering the solution, and controls which he maintains on the process. CHROMALOX cannot warrant any electric immersion heater against failure by sheath corrosion if such failure is the result of operating conditions beyond our control.

Sheath corrosion can result in a ground fault which, depending upon the solution being heated, can cause an explosion or fire.

OPERATION & MAINTENANCE

OPERATION

1. Do not operate heater at voltages in excess of that stamped on the heater since excess voltage will shorten heater life.
2. Always maintain a minimum of 6 to 8" of liquid above the heated portion of the element to prevent exposure of the effective heated length. If the heater is not properly submerged, it will overheat and shorten heater life. **DO NOT OPERATE HEATER IF DRY**
3. Keep heating elements above sediment deposits.
4. Low Megohm Condition — The refractory material used in electric heaters may absorb moisture during transit, storage or when subject to humid environments that will reduce the cold insulation resistance (low megohm). Low megohm may result in a high leakage current to ground and nuisance trips of ground fault protection equipment. Normally, the megohm value increases after heat-up. Typical insulation values are 5 megohm or greater on complete assemblies or 20 megohm on individual unsealed elements. It is recommended that heaters with 1 megohm or less be dried out before applying full power. If dried properly, low megohm will not effect heater life or efficiency. To correct a low megohm condition, remove terminal enclosure cover, gaskets, and terminal hardware. Bake heaters in an oven at 300 to 500°F for several hours or preferably overnight. An alternate procedure is to cycle the heater in 10 to 15 minute periods at low voltage until megohm values are normal. Sheath temperatures should not exceed 350°F

MAINTENANCE

1. Heaters should be checked periodically for coatings and corrosion and cleaned if necessary.
2. The tank should be checked regularly for sediment around the heater as sediment can act as an insulator and shorten heater life.
Note: Applies to all items, not just #2. User is responsible for maintenance schedule based on their knowledge of the heated medium and operating conditions.
3. Remove any accumulated sludge deposits from heater and from tank.
4. Check for loose terminal connections.
5. If corrosion is indicated in the terminal enclosure, check terminal enclosure gasket and replace if necessary. Check conduit layout to correct conditions that allow corrosion to enter the terminal enclosure
6. Clean terminal ends of all contamination.

⚠ WARNING

ELECTRIC SHOCK HAZARD. Disconnect all power before installing or servicing heater. Failure to do so could result in personal injury or property damage.

COMMON RENEWAL PARTS

1. Thermostat Kit (order by PCN):		Gasket	132-012603-004
A. 0-100°F	PCN 277835	Cover	080-012602-001
B. 60-250°F	PCN 277819	4 Post Terminal Block	303-001843-001
2. Thermostat Knob:		3 Post Terminal Block	303-006621-003
A. 0-100°F	169-019605-002	Thermostat Mounting Bracket	027-072456-001
B. 60-250°F	169-019604-001		
3. Sludge Legs:		4. Thermostat	
A. TLC, KTLC Series	176-114713-001	A. 0-100°F (84" Capillary)	300-048518-005
B. TLI, KTLI Series	176-114713-001	B. 60-250°F (84" Capillary)	300-048518-002
C. TLO, KTLO Series	176-114713-002	C. 0-100°F (144" Capillary)	300-048518-019
D. TLS, KTLS Series	176-114713-003	D. 60-250°F (180" Capillary)	300-048518-022

NOTE: Custom units may not use the same standard components.

Limited Warranty:

Please refer to the Chromalox limited warranty applicable to this product at
<http://www.chromalox.com/customer-service/policies/termsofsale.aspx>.

**Chromalox, Inc.
103 Gamma Drive
Pittsburgh, PA 15238
(412) 967-3800
www.chromalox.com**