

## Installation Instructions

# RDK-1 Downspout Hanger


For Self-Regulating CPR Heating Cables



PJ482-4  
161-511930-006  
May 2020

# RDK-1 Downspout hanger Kit

## Self-Regulating CPR Heating Cable Installation Instructions

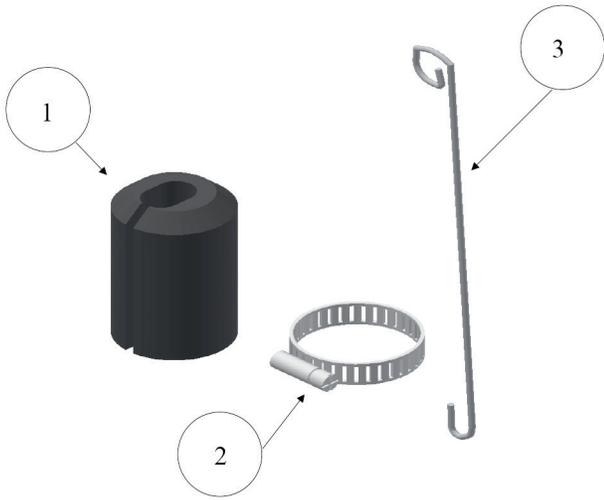

Item	Qty	Description
1	1	Split Grommet
2	1	Clamp
3	2	Hanger



### General

The RDK-1 Downspout Hanger Kit is used to suspend and prevent damage to Chromalox Roof and Gutter Heating Cable as it enters gutter downspout. This kit contains material for one downspout entrance.


### Certifications & Approvals



### Tools Required for Kit Installation

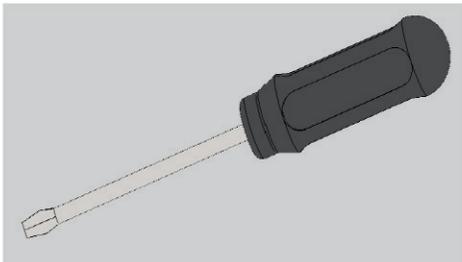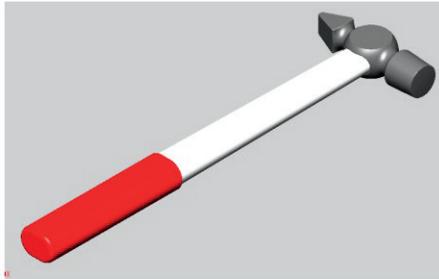

### Actual Kit Dimensions

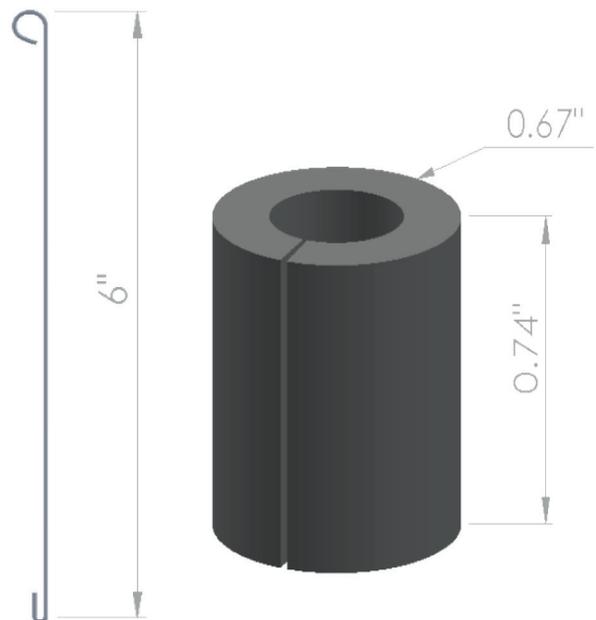

**⚠WARNING**

**HAZARD OF ELECTRIC SHOCK. Disconnect all power before starting. All installations must be effectively grounded in accordance with the National Electrical Code to eliminate shock hazard.**

**⚠WARNING**


**Turn off power before removing junction box cover at all times.**

**⚠WARNING**

**Users should install adequate controls and safety devices with their electric heating equipment. Where the consequences of failure may be severe, back-up controls are essential. Although the safety of the installation is responsibility of the user, Chromalox will be glad to assist in making equipment recommendations.**

**Order Separately**

**RDK-1 (513279)**

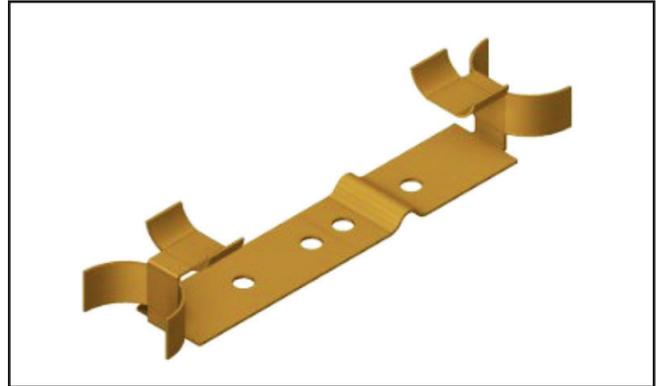

---


**Cable Installation Instructions CPR**



**1.** Place the split grommet around the heating cable where the downspout hanger will be placed.



**2.** The wire hanger has a 180° hairpin bend at one end and a loop bend at the other end. Center the hairpin end of the wire hanger along the grommet. Slide the clamp over the wire hanger and into the bend of the hanger. Tighten the clamp until the hanger and cable are firmly

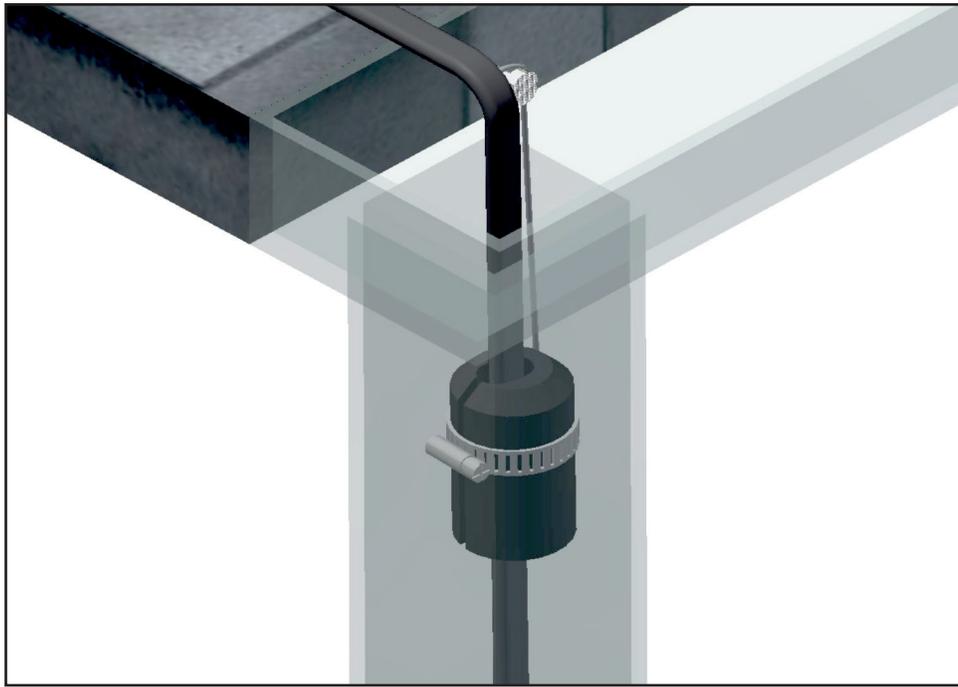

3. Attach the hanger assembly to the roof by driving a roofing nail or screw through the looped end of the hanger.

**Limited Warranty:**

Please refer to the Chromalox limited warranty applicable to this product at <http://www.chromalox.com/customer-service/policies/termsofsale.aspx>.

**Chromalox, Inc.**  
**1347 Heil Quaker Boulevard**  
**Lavergne, TN 37086**  
**(615) 793-3900**  
**[www.chromalox.com](http://www.chromalox.com)**